

Assembly Instructions

BOAT BIMINI TOP



PLEASE NOTE:
Please use the storage boot to protect the fabric when not using the bimini top.
Please fold the bimini top when vessel speed exceeds 45MPH.

COMPONENTS AND PARTS



A
3 pcs



B
3 pcs



C
2 pcs



D
2 pcs



E
2 pcs



①



②
4 pcs



③
2 pcs



④
4 pcs



⑤
12 pcs